




Microphone

Quick Start Guide

Teacher Microphone

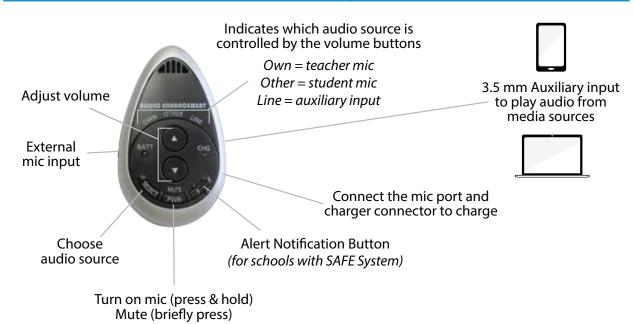

Student Microphone



Microphone LEDs Key

BATT LED

Green, solid On

Green, blinking
Microphone is muted

Red, solid
Depleted battery



CHG LED

LED on Charge is complete

Blinking (2 sec)
Battery is charging

Receiver





3 Red LED lights SAFE System Alert has been sent



2 Green and 1 Red LED lights
First responders have seen the alert

Microphone Tips & Tricks

- Wear the mic 4-6 inches below your chin
- Charge your microphone nightly
- · Speak in a normal conversational tone
- Don't turn up the volume too high. If you can hear your voice through the speakers, it's too loud. Invite another person to help you set the volume
- Use microphone daily for best results

Find more Tips & Tricks at

AudioEnhancement.com/MicTips