

XD MICROPHONE

QUICK START GUIDE



TEACHER MICROPHONE LINKING

1. With the microphone off, press the *Link* button on the front of the amplifier or side of the BEAM (Look for the blinking *yellow* LED).



2. With the microphone off, press and hold the *REC* button. Then, promptly press and hold *PWR* until microphone is linked.



3. Successful microphone linking will produce a *beep* through the system, and on the front of the amplifier you will see an additional *green* LED.



STUDENT MICROPHONE LINKING

1. Press and hold the *PWR LINK* button on the back of the XD Student Microphone.



2. While holding, use your thumb to slide the *TALK* button up into the on position. Successful linking will produce an audible beep, as well as an additional *green* LED.



LINKING THE MEDIA CHANNEL

1. The microphone cannot be linked to the Media channel unless *MIC 1* and *MIC 2* channels are on.
2. Make sure the microphone needing to be linked, either the Teacher or Student, is turned off.
3. Confirm that both *Channel 1* and *Channel 2* mics are on and connected to the amplifier.
4. Follow XD Teacher or XD Student Microphone Linking section instructions.
5. In around 10 seconds you should hear a beep and the amplifier *LINK* LED will be solid *yellow*.

CHARGING YOUR XD MICROPHONE

1. Connect the USB-C plug of the charger to the DC input terminal of the microphone. After connecting the microphone to the charger, the *BATT* indicator (*red*) indicates the charging status.
2. When the *BATT* indicator stops blinking and turns solid *green*, the microphone is fully charged. If the *BATT* indicator is blinking rapidly it means that the USB-C isn't fully inserted.

REMINDER

Charge the microphone at the end of each day to ensure its functionality and longevity.

XD TEACHER MICROPHONE VOLUME CONTROL

1. Press *SELECT* to choose the desired source to control. An LED will illuminate to indicate the selected source. *OWN* will control the level of the microphone currently in use. *CH3* will control the other microphone if a second microphone has been linked.
2. Press the *up arrow* to increase the level of the selected source or the *down arrow* to decrease the level.