

# EPIC SYSTEM KIOSK 2.0

## QUICK START GUIDE



# INTRODUCTION

The **EPIC System Kiosk** is a compact computing device specifically designed to power the front-end interactions of the EPIC (Education Paging & Intercom Communications) System®. The Kiosk features a 21.5" full HD multi-touch display. The EPIC System Kiosk also includes a paging microphone that provides crystal-clear audio, ensuring important messages will be heard clearly by their intended recipients.


## SPECIFICATIONS

### SPEAKER BAR



KIOSK DISPLAY

HD Multitouch Display

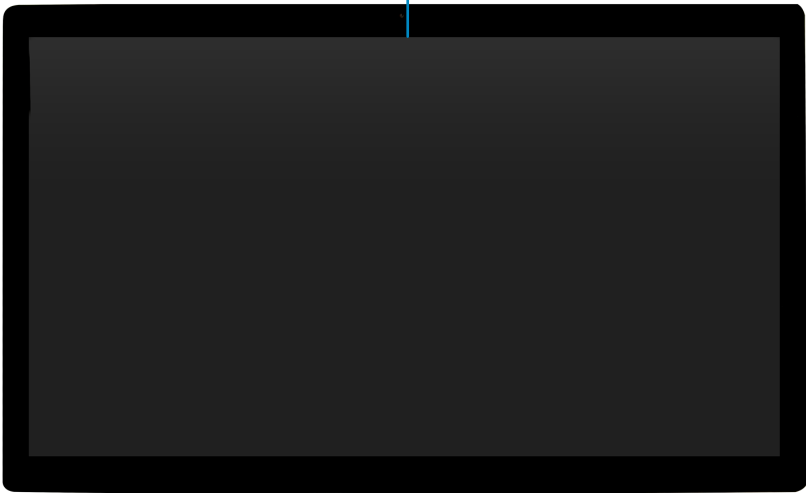

Front


LAN (Ethernet)

USB-A Port Not Used

19 V DC Power

USB-C Port


Home Button

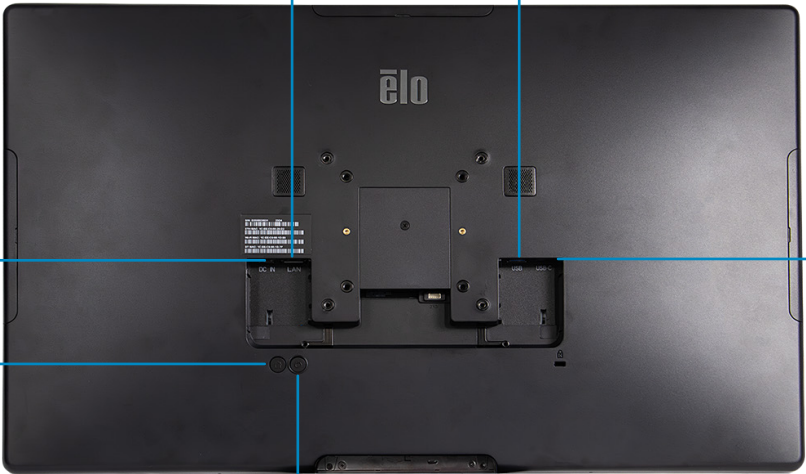

Back

Power On/Off Button


KIOSK STAND

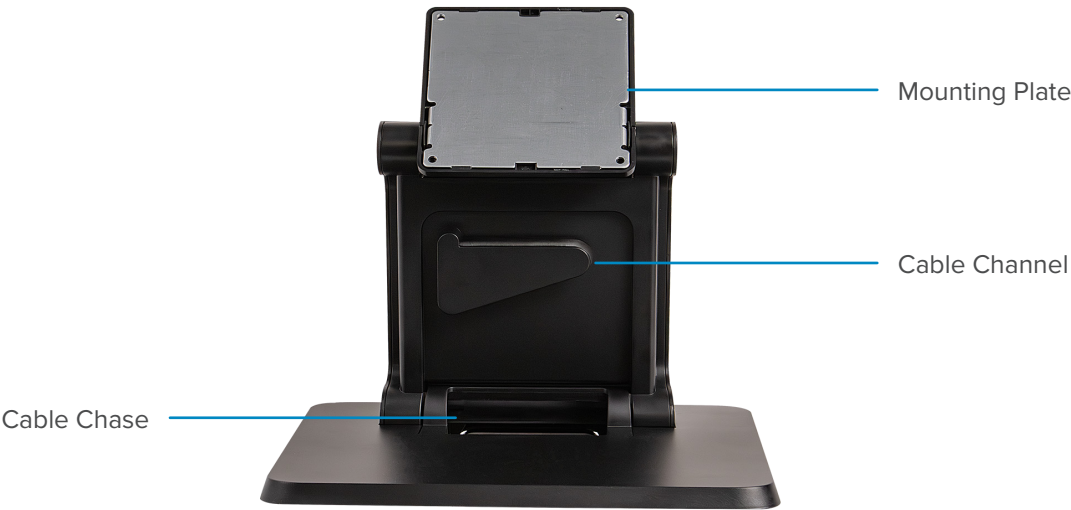

Front



Back

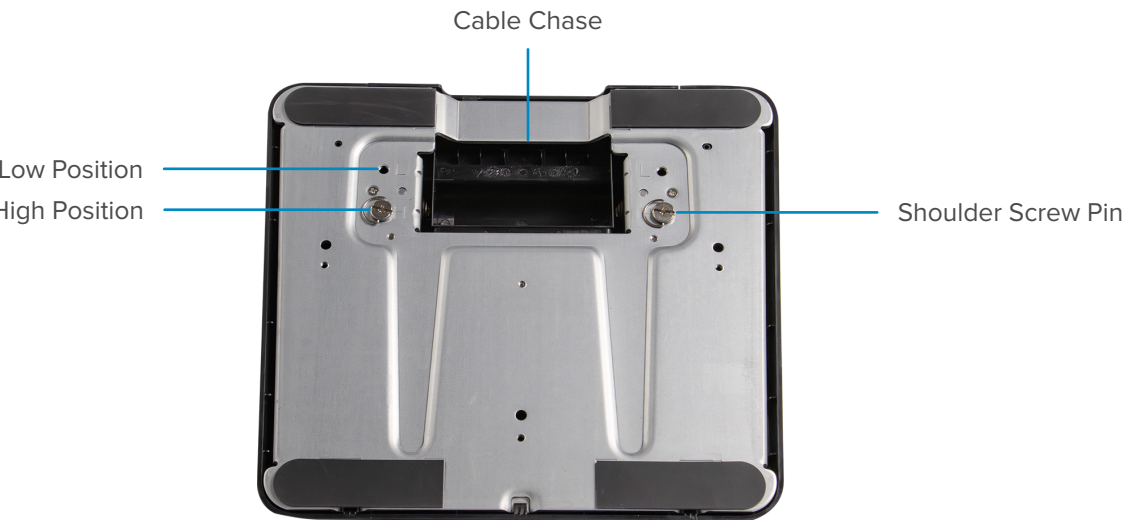

Bottom

# WHAT'S IN THE BOX

## EPIC SYSTEM KIOSK

Display

Kiosk Stand

Wall Mount

Speaker Bar

### Accessories Box:

- Power Supply & Cord
- CAT6 Patch Cable
- #2 Phillips Screwdriver
- (4) Mounting Screws
- Mounting Hardware for Wall Mount

# PRODUCT FEATURES

- 21.5" HD Multi-Touch Display
- 178° Viewing Angle
- Speaker Bar with Integrated Microphone
- Desk Stand and Wall Mount Included
- Low Power

# FUNCTIONAL SUMMARY

## EPIC SYSTEM KIOSK

### Kiosk Display

- 10-Point Capacitive Touch Screen
- Power On/Off Button
- Home Button

### Power Supply

- DC Output 19 V - 3.4 A
- AC Input 100 V - 200 V 1.5 A

### USB-A Port

- Connected to Speaker Bar

### LAN (Ethernet)

- RJ45 Data

### Speaker Bar

- Volume Up/Down
- Speaker Mute (Button is disabled)
- Microphone Mute
- Microphone LED is red when muted
- Power LED is green when powered

# KIOSK ASSEMBLY

## HOW TO INSTALL KIOSK STAND

1. Turn the Kiosk Stand over, and using a screwdriver or the thumb screw rings, remove the two shoulder-screw pins from the bottom of the Kiosk Stand.
2. Lift the base of the stand into the High Position.\* (*Figure 1 & Figure 2*).



Figure 1



Figure 2

3. Reinsert the shoulder screw pins into the High Position screw holes, and install them back into the base using a screwdriver or the thumb screw rings (*Figure 3*).



Figure 3

\*The angle of the Kiosk Stand can be adjusted to accommodate a screwdriver, however, you MUST brace the mount with your hand as you move it to avoid damaging the EPIC System Kiosk.

4. Align the mounting plate on the Kiosk Stand to the screw holes on the back of the Kiosk Display and install the four mounting screws into the display (*Figure 4 & Figure 5*).



Figure 4



Figure 5

## NOTE

The Elo logo on the Kiosk Display should be aligned with the Elo logo on the Kiosk Stand (*Figure 4*).

## HOW TO INSTALL THE SPEAKER BAR

1. Clip the speaker bar to the top of the display (*Figure 6*).
2. Plug the microphone into the back of the speaker bar (*Figure 7*).



Figure 6



Figure 7

3. Plug the USB-C connector into the USB-C port on the back of the display (*Figure 8-10*).



Figure 8



Figure 9



Figure 10



# CABLE INSTALLATION

## HOW TO INSTALL EPIC SYSTEM KIOSK CABLES

1. Begin by removing the left plastic cover from the back of the display.
2. Take the cord from the power supply, and feed the cord through the bottom opening of the Kiosk Stand (*Figure 11*).
3. Plug the cord into the *DC IN* port on the back of the display (*Figure 12*).

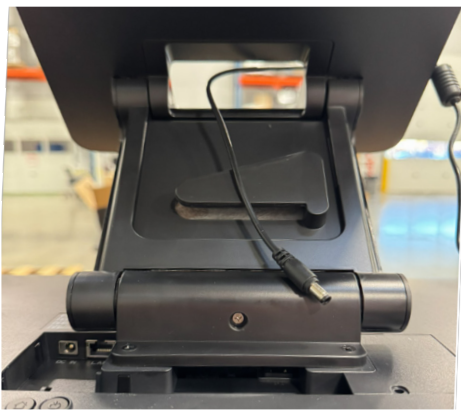


Figure 11



Figure 12

4. Take the CAT6 patch cable, and feed the cable through the bottom opening of the Kiosk Stand (*Figure 13*).
5. Plug the cable into the *LAN* port on the back of the display (*Figure 14*).



Figure 13



Figure 14

6. Using one of the included wire ties, loop the wire tie around both the power supply cord and the CAT6 patch cable to secure them in place, then trim any excess wire tie off (*Figure 15 & 16*).



Figure 15

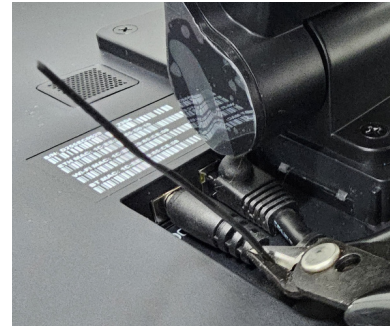


Figure 16

7. Once the cables are secured, install the left plastic cover back onto the display.
8. Route the cables through the cable channel on the Kiosk Stand, and out through the cable chase in the back of the Kiosk Stand (*Figure 17 & Figure 18*).



Figure 17



Figure 18

## HOW TO CONNECT THE EPIC KIOSK TO THE EPIC SERVER

1. Connect the Ethernet cable to an Ethernet port.
2. Connect the power supply to an AC power outlet.
3. Allow the unit to boot.
4. If the Kiosk was preprogrammed, it will automatically connect to the EPIC Server. Enter your login information and password and you will be logged into the EPIC Server (*Figure 19*).

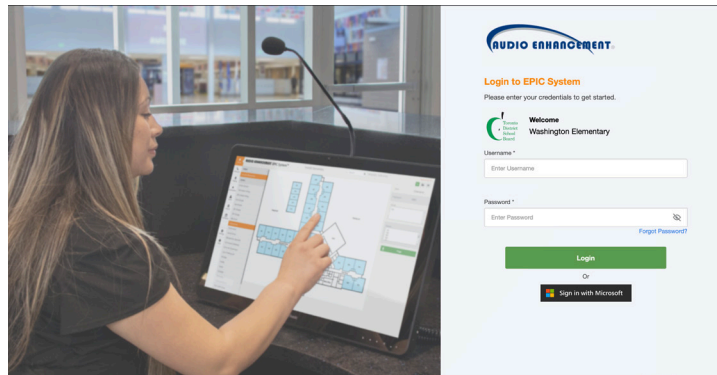


Figure 19

5. If the Kiosk wasn't preprogrammed, you will get an error message. If you see the error message, *Webpage not available*, you will need to enter the IP address of the EPIC Server (*Figure 20*).

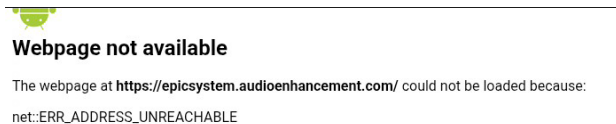


Figure 20

6. To unlock the Kiosk, double-tap the top-left corner of the display followed by double tapping the bottom right corner. Each tap should be about 1/2 second apart.
7. That will bring up a window prompting you to enter the kiosk PIN 1978 (*Figure 21*).

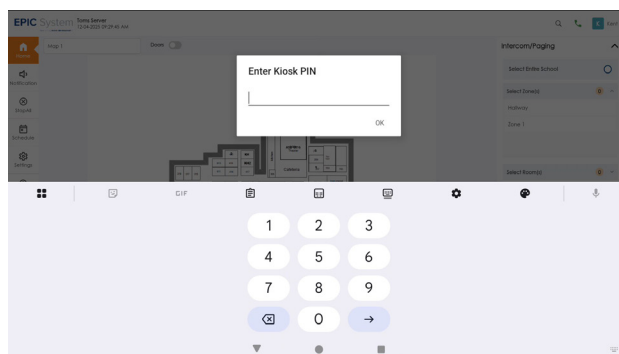


Figure 21

8. The EPIC Console browser window will appear on the *left* side of the display (Figure 22).

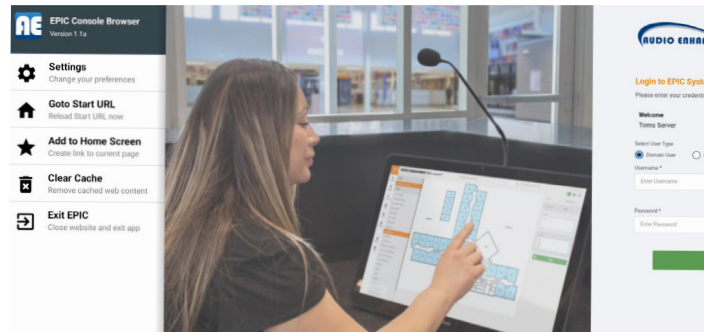


Figure 22

9. Select *Settings* and then *Web Content Settings* (Figure 23 & Figure 24).

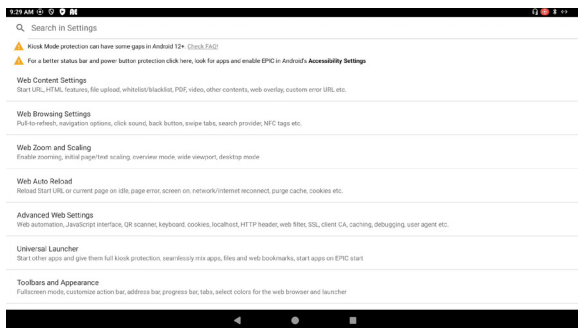


Figure 23

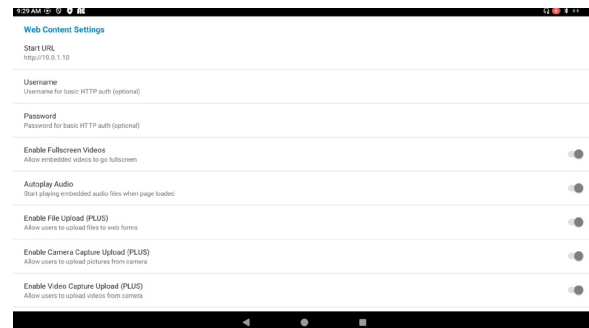


Figure 24

10. Select *start URL*. Enter the IP address of the EPIC server. The IP address shown is the server used in our office (Figure 25).

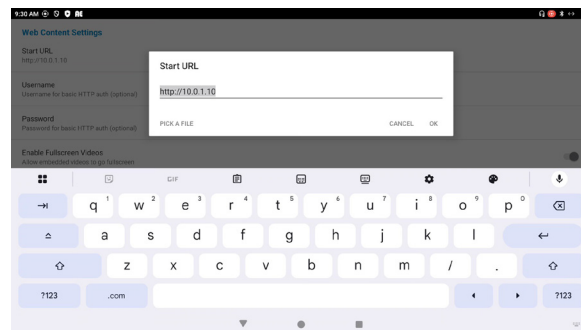


Figure 25

11. Once the IP address is entered click on the *Goto Start URL* and relaunch the EPIC application (Figure 26).

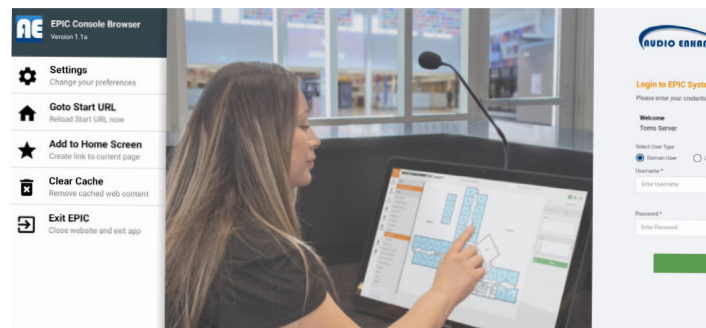


Figure 26

12. If you get a *Webpage not available* message, once you launch the EPIC application, this means that the Android software for Ethernet has not been set up (*Figure 27*).

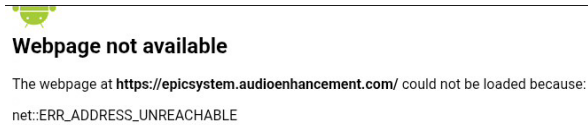


Figure 27

13. Repeat the double tap from steps 6-8, then navigate to the app screen and select the *Settings* icon.
14. From the Setting menu, select *Network & Internet* and the *Ethernet Configuration* link (*Figure 28*).

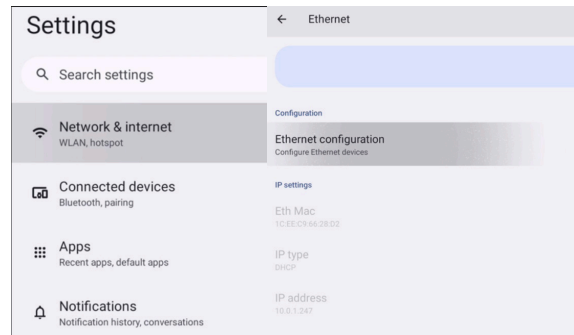


Figure 28

15. Select *Static* to configure the Kiosk IP Address (*Figure 29*).

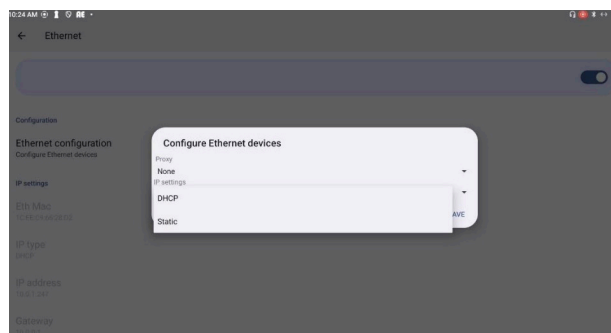


Figure 29

16. Enter the appropriate IP information and select *Save* (*Figure 30*).

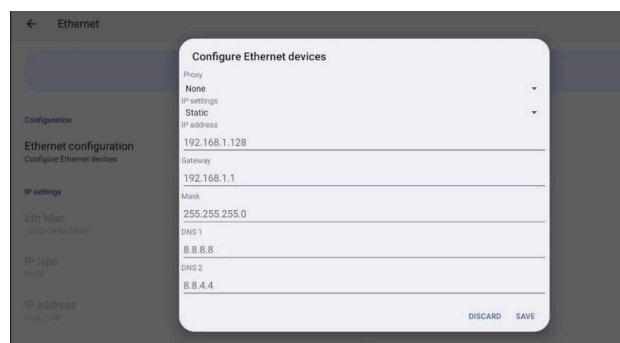


Figure 30

17. Using the back arrow at the bottom of the screen return to the main screen of the Android device and relaunch the EPIC application.