


MIC360® 2.0

QUICK START GUIDE



Top View With Windscreen

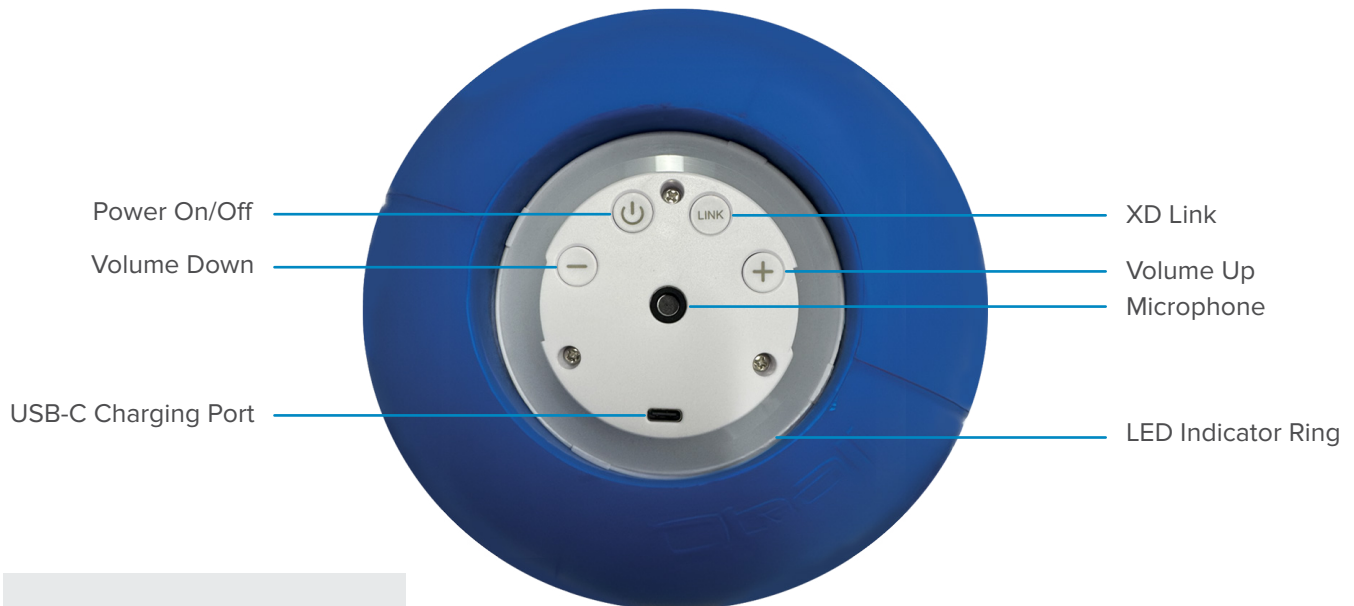

Top View Without Windscreen

NOTE

To access the controls, twist the windscreen counterclockwise.

LED INDICATOR RING

Slow Yellow Blinking Light

Mic360® 2.0 is trying to connect to its previously linked receiver.

Fast Blinking Yellow Light

Mic360 2.0 is in linking mode.

Purple Light

Mic360 2.0 is linked to the XD Receiver.

Microphone is muted. Muting happens when the Mic360 2.0 is moving, or when it is resting on its windscreen.

Green Light

Mic360 2.0 is linked to the XD Receiver.

Microphone is active.



CHARGING

Plug the USB-C cable into the Mic360 2.0 to charge.

During charging, the red LEDs will blink in sequence. Once all four LEDs are solidly lit, the device is fully charged.



LINKING



Press and hold the *Power* button for 2 seconds to turn on the Mic360 2.0.



Press and hold the *LINK* button for 1 second to initiate the linking process.



The LED Ring will blink yellow slowly when first powered on.

After linking is initiated, it will blink yellow in sequence.



Press the *LINK* button on the classroom amplifier.



When the linking process is successful, you will hear an audible beep, the green LEDs on the classroom amplifier will be lit, and the LED Ring on the Mic360 2.0 will be green.

